

### Testing and adjusting values

---

|                    |             |
|--------------------|-------------|
| Begin of injection | immediately |
|--------------------|-------------|

 
---

### Special tool

---

|       |
|-------|
| Clamp |
|-------|

---




|                  |
|------------------|
| 000 589 40 37 00 |
|------------------|

---

### Removal

---

- 1 Remove air filter.
- 2 Remove cover (30) after loosening fastening screws.
- 3 Remove diaphragm and compression spring.
- 4 Clean pump chamber.

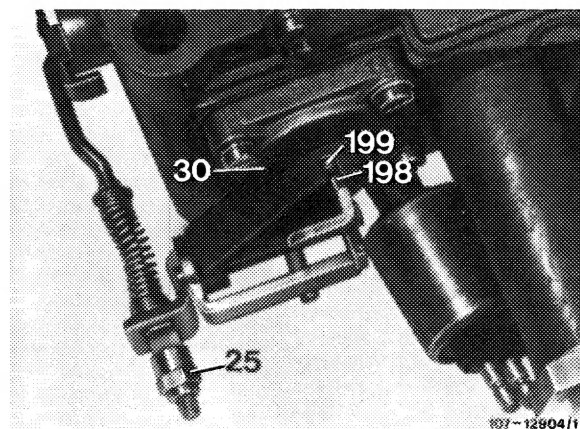

### Installation

---

- 5 Install new diaphragm, if required.

**Note:** Insert compression spring in such a manner that the large diameter faces the pump chamber. When tightening fastening screws of cover, operate throttle valve lever to full extent.

- 6 Adjust accelerating pump (07.2—150).